

TIMBERWOOL™ WOOD WOOL

CLEANING & MAINTENANCE INSTRUCTIONS

CLEANING & MAINTENANCE TOOLS

- Vacuum cleaner (with soft brush attachment)
- Cloth
- Touch up paint

CLEANING & MAINTENANCE INSTRUCTIONS

For dust or dirt accumulation that may occur when installing Timberwool™ Wood Wool panels, a vacuum cleaner with a soft brush attachment may be used. The soft brush attachment should be at least 1" for best results. If additional cleaning is needed, the surface can be spot cleaned with a damp cloth.

If chipping or deep abrasions occur on painted panels, Second Skin recommended touch up paint should be used to restore the color. Please follow the instructions specific to the paint when applying.

Timberwool™ Wood Wool panels do not require any additional maintenance once properly installed except for occasional cleaning. The high-quality wood wool fibers bound by cement make the panels Class A fire rated, mold- and fungi-resistant, and will not sag or deform with changes in humidity.

Questions?

Please reach out to your sales associate or give us a call at 800-679-8511!