


CAR AUDIO DOOR KIT - LUXURY LINER PRO™

SOUND REDUCTION + MID BASS INSTALLATION INSTRUCTIONS

WHAT COMES IN THE KIT?

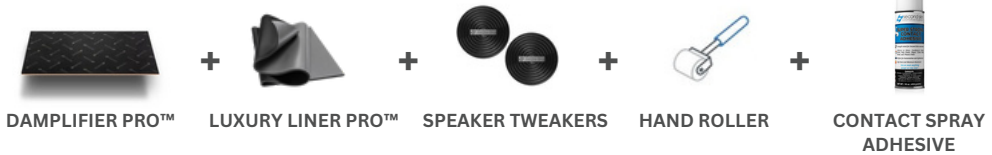

INSTALLATION TOOLS



HOW TO INSTALL ([Watch Install Video](#))

- 1 Remove your door panels such that the **bare sheet metal** is exposed.
- 2 Clean the bare sheet metal to **remove any dirt, oils, and waxy substances** for better material adherence.
- 3 Measure and cut Damplifier Pro™ mats with a utility knife to fit. Use a cardboard template if desired. We recommend **60% coverage** on outer skin and **40% coverage** on inner skin (avoid mechanical and/or electrical components).
- 4 Peel the adhesive backing from the Damplifier Pro™ Mats and **press them firmly** with as much pressure and coverage as practical across the **entire bare sheet metal**. Roll over the mats with the **wooden hand roller** to remove air bubbles and **bond** the material to the **substrate**.
- 5 **Option #1:** Install Luxury Liner Pro™ inside the door cavity on top of Damplifier Pro™. Use the included spray adhesive to apply Luxury Liner Pro™ with 100% coverage on the outer door skin. Once installed, **the grey foam** should face the outer door skin (and Damplifier Pro™) and the **black MLV** should face you.
Option #2: Use Luxury Liner Pro™ to seal the door cavity. This strategy will turn your door into a **speaker box** and **improve mid-bass**. We recommend the **Dual Lock™ reclosable fastener** for this install method. Once installed, the grey foam should face inside the door cavity and the black MLV should face you.
- 6 Reattach your door panels and **enjoy a quieter car!**