

# SOUND LOCK™ ASTRAGAL SEAL

## INSTALLATION INSTRUCTIONS

### INSTALLATION TOOLS

- Tape Measure
- Electric Drill
- Miter Saw
- Eye Protection

### PLANNING


- 1 Measure from the top of the door jamb to the floor to get the right size seal.

### PREPARATION

- 1 Leave magnetic astragal assembled and trim any excess necessary from the bottom end. The correct end to trim is the end opposite the red label.

### INSTALLATION

- 1 Drill pilot holes into door as needed for metal doors.
- 2 Install so magnets pull the doors together automatically for a tight fit. Ideal install is with a  $7/16"$  gap between housings (see diagram below). Install with a  $3/8"$ – $1/2"$  gap between housings is acceptable.
- 3 Test the door to make sure there are no light gaps between the doors.

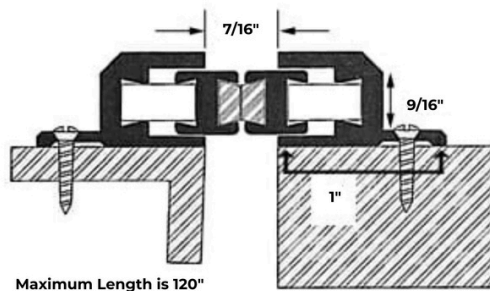

The astragal seal you need is always the same or slightly bigger than your door jamb height. The seals are adjustable in the field. Do not trim the end with the red label on it when making adjustments.